



INSTALLATION INSTRUCTIONS

Unitronic UniFLEX Hardware Kit for 2.0 TSI® EA888 EVO4 (w/o Sensor) UH012-FLA

Unitronic recommends that you read through the entire installation instructions prior to beginning the installation to familiarize yourself with the included components, tools required, and procedures involved with the installation.

DISCLAIMER: Unitronic recommends that a Unitronic Authorized Dealer or other qualified and trained professional should perform the installation of this product.

Unitronic Installation Instructions are also available in digital format, if you prefer. Please visit the corresponding product page for a link to download the digital Installation Instructions. www.getunitronic.com

It is recommended to confirm all parts are present prior to beginning the installation.

PACKING LIST:

PART NUMBER	DESCRIPTION	QUANTITY INCLUDED
UH019-TL2	UniFlex Ethanol Device	1
UH026-FL7	UniFlex Sensor Harness (30cm)	1
UH028-FL7	UniFlex B9/8Y/MK8 Body Harness	1
UH003-TL0	UniFlex Bracket (Strongly recommended)	1

RECOMMENDED TOOLS NEEDED:

- ¼ ratchet
- Pick Tool
- 10mm socket
- 13mm socket
- 2.5 mm Allen socket



INSTALLATION INSTRUCTIONS

Unitronic UniFLEX Hardware Kit for 2.0 TSI® EA888 EVO4 (w/o Sensor) UH012-FLA

- 1** Open the hood and remove the weather stripping from the passenger side of the plastic cowl along the firewall. (See Fig. 1)
- 2** On the leftmost edge lift the plastic/rubber cover to allow the cowl to be lifted upwards. (See Fig. 2)
- 3** Slowly lift the cowl upwards while unclipping the top edge from the windshield. (See Fig. 3)
- 4** Carefully maneuver the plastic cowl free and pull it away from the center of the car so it separates from the driver's side plastic cowl. Once it is free, remove it from the car (See Fig. 4)
- 5** Removing the plastic windshield cowl from the passenger's side reveals a plastic cover underneath that is held in with pins on the left side and a plastic clip on the center sheet metal bracket. (See Fig. 5)
- 6** Using a pick tool, pry the plastic clip and pull the cover off the center sheet metal bracket. (See Fig. 6)
- 7** Now on the left side pull the plastic cover towards the center of the engine bay to slide it out of the holes on the body and remove it from the car. (See Fig. 7)
- 8** Towards the middle of the engine bay, behind the firewall, locate the soundaktor and its control module located right under the soundaktor. Using a pick tool, pull out the gray locking tab on the 6 pin module connector and disconnect it from the module. (See Fig. 8)



FIG. 1



FIG. 2



FIG. 3



FIG. 4



FIG. 5



FIG. 6

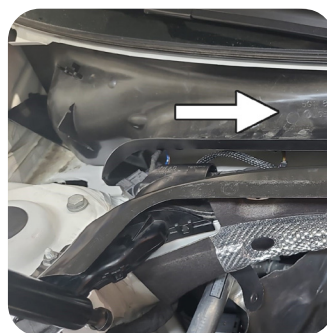


FIG. 7



FIG. 8



INSTALLATION INSTRUCTIONS

Unitronic UniFLEX Hardware Kit for 2.0 TSI® EA888 EVO4 (w/o Sensor) UH012-FLA

- 9** Locate your (UH028-FL7) UniFLEX Body Harness and connect it between the soundaktor module and the OEM wiring harness. Remember to fully seat the connectors and lock the gray locking tabs back in place. (See Fig. 9)
- 10** We recommend routing the wiring harness along the OEM one and using cable ties to secure it along the way towards the left side where the OEM wiring harness passes through the firewall. (See Fig.10)
- 11** On the left side strut tower locate the 10mm nut fastening the firewall to the body and remove it using the 10mm socket and 1/4" wrench. (See Fig.11)
- 12** Once loose, lift the firewall sheet metal upwards and pass the UniFLEX Wiring harness as shown in the picture, making sure it is only touching the rubber seal and not getting pressed by the metal bracket. (See Fig.12)
- 13** Route the wiring harness into the engine bay above the coolant tank following the OEM harness and using cable ties along the way to hold it in place. Reinstall the 10mm nut securing the firewall sheet metal to the strut tower and tighten.
- 14** If you've purchased a UniFLEX bracket (UH003-TL0), mount the bracket to the engine mount bracket immediately in front of the coolant bottle by removing the 13mm bolt (See Fig. 14-A). Once removed, mount the bracket and re-affix the 13mm bolt in place. Using the supplied hardware, mount the UniFlex Ethanol Device (UH019-TL2) onto the bracket. NOTE: There are several different ways you can mount the UniFLEX bracket depending on what other accessories you have installed. (See Fig 14-B & 14-C)

DO NOT MOUNT THE MODULE NEAR OR ON ANY RADIANT HEAT SOURCES



FIG. 9



FIG. 10



FIG. 11



FIG. 12

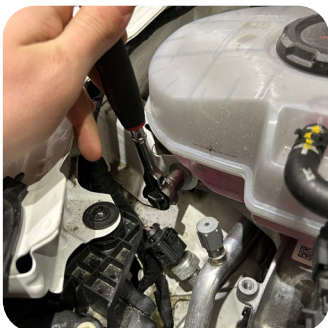


FIG. 14-A



FIG. 14-B



FIG. 14-C



INSTALLATION INSTRUCTIONS

Unitronic UniFLEX Hardware Kit for 2.0 TSI® EA888 EVO4 (w/o Sensor)
UH012-FLA

- 15** Take the (UH026-FL7) UniFLEX Sensor Harness (30cm) and connect it to the UniFLEX device. Route the harness along the OEM fuel line securing it with cable ties along the way. Connect the opposite end of the harness to the Ethanol Content Sensor installed on your car as shown here. (See Fig. 15)
- 16** Reinstall the engine bay plastics in reverse order of removal.

CONGRATULATIONS! You have successfully installed Unitronic's UniFLEX hardware kit!



FIG. 15